EN CZ 5 OCTAVIA CENTRAL LOCKING OF 5. DOOR FOR SKODA OCTAVIA - USER MANUAL

⚠ WARNING: Carefully read following instructions and technical specifications in this manual before installation. The system must be installed and used only according to this manual. The system is designed for vehicles with 12V power supply. It has to be connected to 12V output and to the ground. Neither producer or seller of the system is responsible for damages caused by incorrect installation, using or operating of this product. Unprofessional operation or modification of the system can damage the system alone, or the electric system of the vehicle and leads to warranty loss. For proper working of the system we recommend the installation to be made by authorized service.

SYSTEM DESCRIPTION

Central locking system of fifth door for SKODA OCTAVIA serves to control the door lock while controlling other doors with central door locking with key or remote control. Carrier of servomotor is designed to easy installation, so that there is no need to drill holes in the bodywork and it is maintenance free.

SYSTEM INSTALLATION

- remove the trim fifth door and carefully peel off the protection film
- disconnect the coupling rod from the lock mechanism and unscrew the 3 pieces of screws (TORX 30)
- remove the lock of the fifth door
- attach the servo as shown in picture with carrier part to the lock
- insert M5x8 screws into the two holes from the bottom of the lock
- put serrated washers from the top and firmly fasten low M5 nuts
- place control rod into the servo
- insert plastic handle into moving mechanism of the lock and insert the rod from the servomotor in it
- mount the lock back to 5.door and connect it with the connecting rod
- the other side of the servo support part secure to the fixed part of 5.door
- from the bottom of the fixed part attach a plate with threaded and from the top insert self-tapping screw and tight the support part with fixed part
- connect the wires to the central locking system and test the proper operation of actuator and of the whole mechanism
- in case of opposite running, switch wires between themselves on the one side
- install upholstery back on the 5th door

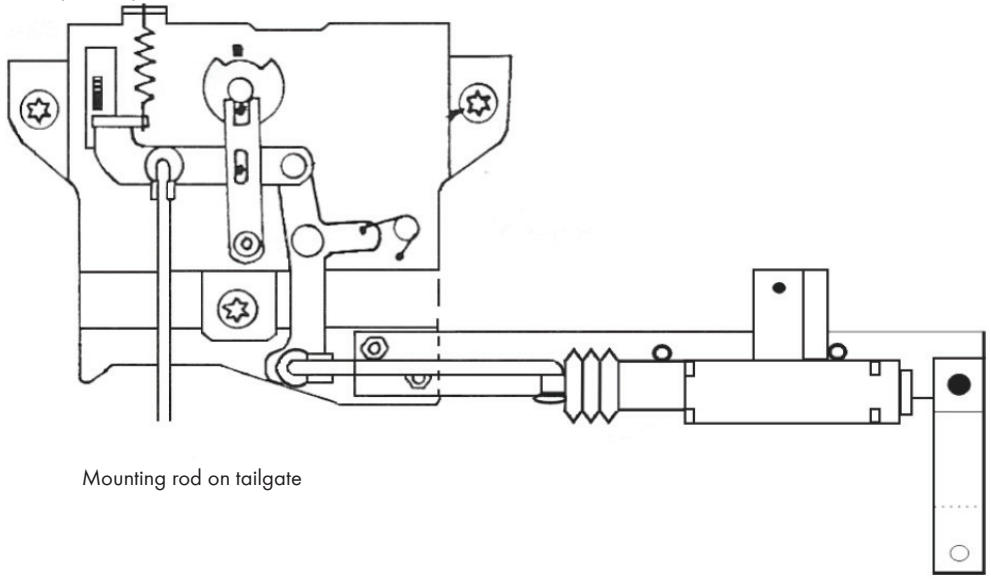

Mounting rod on tailgate

EN CZ 5 OCTAVIA CENTRAL LOCKING OF 5. DOOR FOR SKODA OCTAVIA - USER MANUAL

⚠ WARNING: Carefully read following instructions and technical specifications in this manual before installation. The system must be installed and used only according to this manual. The system is designed for vehicles with 12V power supply. It has to be connected to 12V output and to the ground. Neither producer or seller of the system is responsible for damages caused by incorrect installation, using or operating of this product. Unprofessional operation or modification of the system can damage the system alone, or the electric system of the vehicle and leads to warranty loss. For proper working of the system we recommend the installation to be made by authorized service.

SYSTEM DESCRIPTION

Central locking system of fifth door for SKODA OCTAVIA serves to control the door lock while controlling other doors with central door locking with key or remote control. Carrier of servomotor is designed to easy installation, so that there is no need to drill holes in the bodywork and it is maintenance free.

SYSTEM INSTALLATION

- remove the trim fifth door and carefully peel off the protection film
- disconnect the coupling rod from the lock mechanism and unscrew the 3 pieces of screws (TORX 30)
- remove the lock of the fifth door
- attach the servo as shown in picture with carrier part to the lock
- insert M5x8 screws into the two holes from the bottom of the lock
- put serrated washers from the top and firmly fasten low M5 nuts
- place control rod into the servo
- insert plastic handle into moving mechanism of the lock and insert the rod from the servomotor in it
- mount the lock back to 5.door and connect it with the connecting rod
- the other side of the servo support part secure to the fixed part of 5.door
- from the bottom of the fixed part attach a plate with threaded and from the top insert self-tapping screw and tight the support part with fixed part
- connect the wires to the central locking system and test the proper operation of actuator and of the whole mechanism
- in case of opposite running, switch wires between themselves on the one side
- install upholstery back on the 5th door

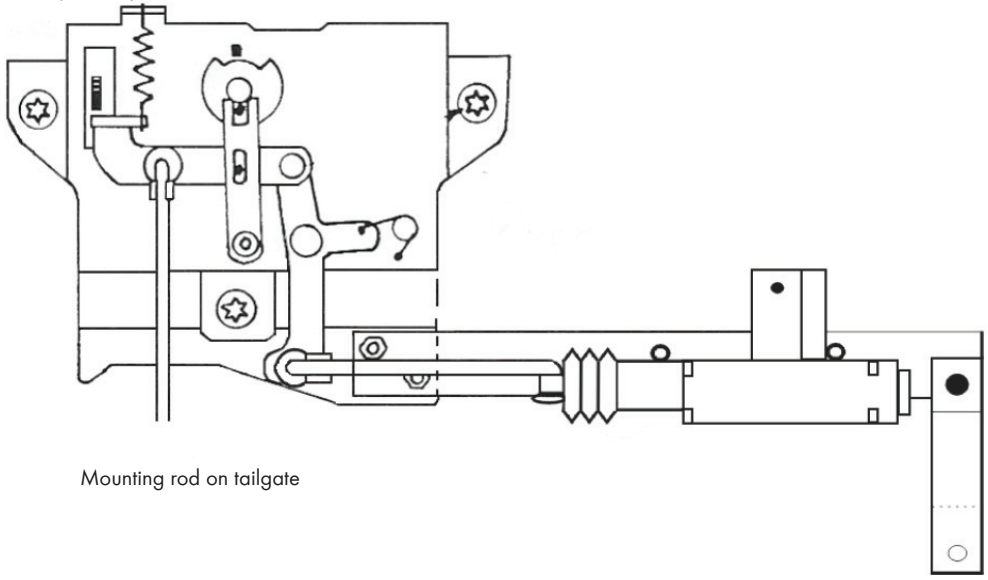

Mounting rod on tailgate